


## 2. Card Menu Screen

When the [Card Menu] switch on the Main Menu screen is pressed, the following “Card Menu” screen appears.

This screen is used to transfer screen data between the V7 series and a CF card or a memory card.

Moves back to the Main Menu screen or the initial screen.

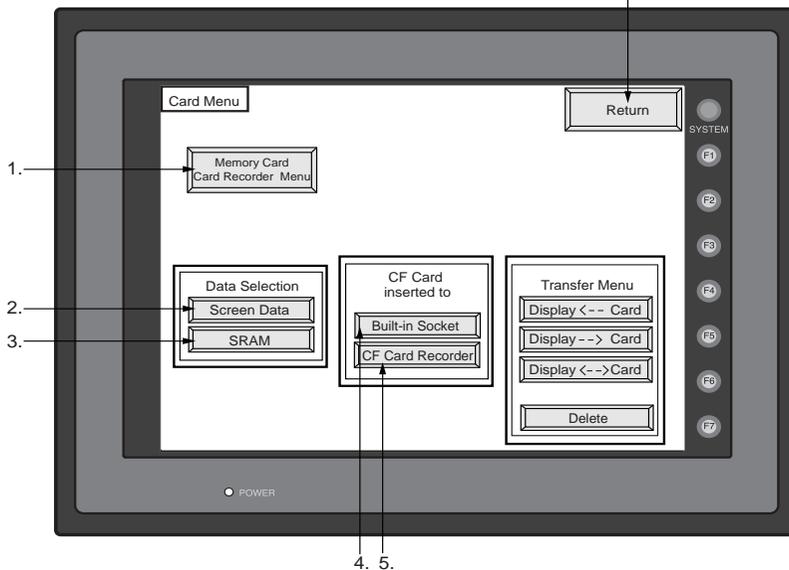


1. [Memory Card Card Recorder Menu] switch  
Press this switch when connecting the card recorder to the MJ port of the V7 series and transferring screen data between the V7 series and a memory card.
2. [Screen Data] switch  
Press this switch when transferring screen data between the V7 series and a CF card.
3. [SRAM] switch  
Press this switch when saving backup copies of the SRAM memory or V7EM-S (SRAM cassette) or when uploading the backup data from the CF card to the V7 series.
4. [Built-in Socket] switch  
Select the position where a CF card is inserted. Press this switch when inserting a CF card to the built-in socket.
5. [CF Card Recorder] switch  
Select the position where a CF card is inserted. Press this switch when inserting a CF card to the CF card reader connected to the V7 series.

### When [Display --> Card] is Selected:

1. When [Display --> Card] is selected, the "Card Transfer" screen is displayed.

Flashes during communication with the CF card.

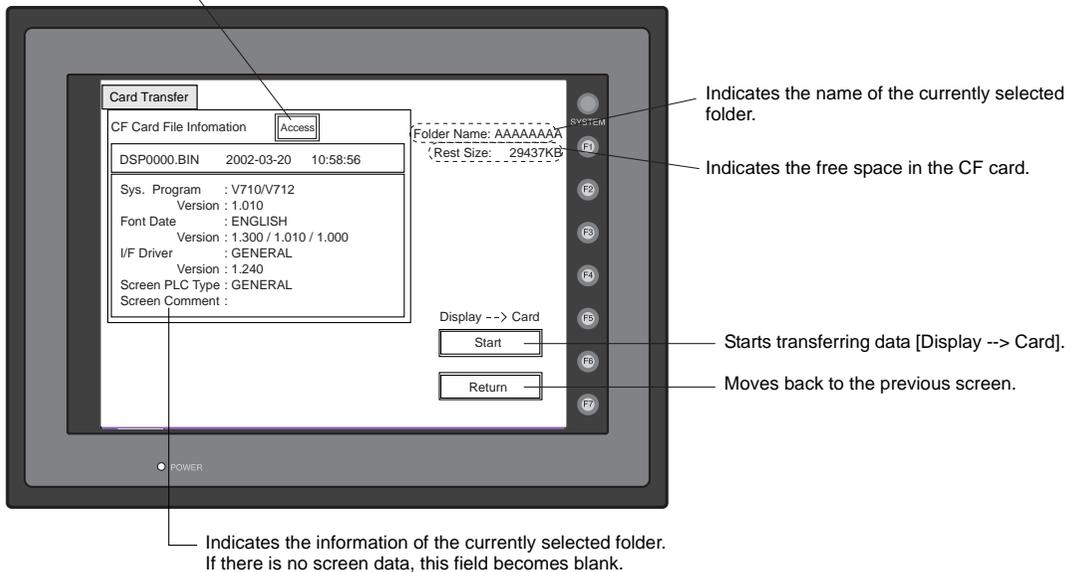

2. Check the folder name and CF card file information, and press the [Start] switch.

\* When the access folder name of screen data is the same as that in the CF card, the CF card file information is indicated on the screen, and data in the MONITOUCH overwrites the CF card data. Note that the CF card data is lost when data is overwritten. When the CF card file information is blank, a new file "DSP0000.BIN" is created in the DSP folder.

3. During data transfer, the [Start] switch changes into [Busy] and flashes. When data has been transferred successfully, the following window is displayed.



Press the [OK] switch. The CF card file information shows data that has been transferred. If any other message is displayed, refer to page 6-22.

4. Press the [Return] switch. The "Card Menu" screen is displayed again.